正面

65.mm

115.mm

230.00

390.00

背面

InFocus

User Manual

F125

1

Introduction

Thank you for choosing InFocus F125 phone.
It is recommended that you first read this User Manual to understand the basic operation of the phone. Please browse the following URL to download user guide: www.infocusphone.com

Your package should include the following products. For any missing items, please contact your dealer.

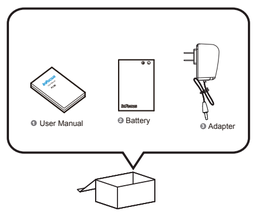

2

Your Phone

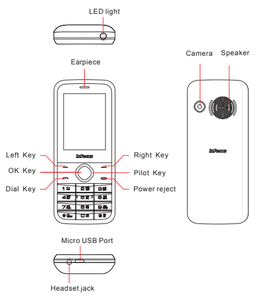

3

Installing SIM Card(s) and Memory Card

1. Place your phone face down on a flat surface.
2. Locate the small gap on the lower left corner of the back cover, gently pull up to release the latches and slowly remove the cover.

3. Insert the SIM card(s) into the slot(s) as illustrated.

NOTE:
•To remove the SIM card, push the SIM card firmly into the slot first to eject it, then pull it out.
•When using the card adapter do not use excessive force to remove the SIM card as this can damage the card.

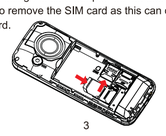

4

4. Insert the memory card into the slot with gold connectors facing down.

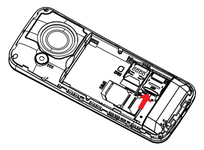

5. Replace the back cover and press along the edges until the latches are fully sealed.

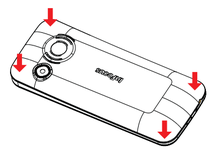

5

Charging the Battery

Before using the phone, it is recommended to fully charge the battery first.
1. Connect the smaller end of the USB cable to the USB port of the device.
2. Plug the AC adapter to a wall outlet to start charging.

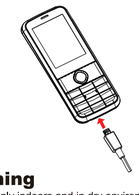

Warning

•Charge only indoors and in dry environments.
•For safety, the overheat protection will be active during charging. If the system temperature reaches above the maximum level, the device will automatically stop charging. The device will only resume charging when normal operating temperature is reached.

Initial Start Up

After installing the SIM card(s) and charging the battery, the device is ready to be used.

6

Home Screen

From the Home screen as Picture 1, you can quickly access common features and view notifications of missed calls, received messages, check battery and connection status.

Making Your First Call

To make a call as Picture 2
1. Enter the phone number on the keypad.
2. Select right soft key to correct any number. select and hold to erase the entire number.
3. Press dial key to make a call.
4. To end the call, select End key.

NOTE: If you have inserted two SIM cards, select the desired SIM network.

Picture-1

Picture-2

7

To receive a call

To answer a call, select answer.

Contacts

Adding contacts

1. Input telephone number.
2. Select add to add a contact.
3. Enter the contact information such as name, phone number, etc.
4. Select OK to save the contact.

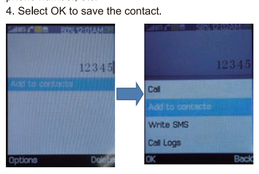

8

Sending a Text Message

1. From the Home screen, select main menu.
2. Select messages

NOTE: If you have inserted two SIM cards, select the desired SIM network first before select ping .

3. In the To field, enter the recipient's phone number or name.
4. Compose your message.
5. Select to send your message.

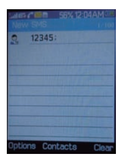

Using Browser

To open a web page
1. From the Home screen, select services
2. Select the address bar.

9

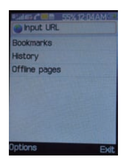

Using Bluetooth

1. From the Home screen, select main menu.
2. In tool, select Bluetooth and turn it to on, as Picture 3.
3. Available devices are listed. To search for a new device, select SEARCH FOR DEVICES.
4. Select a detected device.
5. To start pairing, enter the PIN then select OK.

NOTE:
The PIN of the device must be the same PIN on the other bluetooth device.
On some devices, select Pair to start pairing.
6. The paired bluetooth device name is displayed

10

Picture-3

Taking Photos and Videos

This device is equipped with rear camera to take photos & videos.
1. From main menu select camera.
2. Aim the device at the subject.
3. Select OK key to take a picture.

11

To record a video

1. From take photo interface select menu , choose video
2. Aim the device at the subject.
3. Select OK key to record a video.
4. Reselect can stop it.

Basic Phone Settings

Phone settings

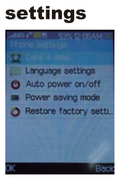

12

Setting an alarm

1. From main interface， select main menu.
2. Select tool.
3. To add alarm ,select alarm.
4. To set time select time reset it.
5. Select yes.

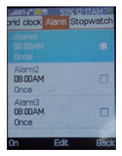

Important Safety Information

Please read before proceeding

• DO NOT place objects on top of the device, as they may scratch the screen.
• DO NOT drop your device or subject it to severe impacts . Bending the body and pushing the display or keys with extreme force could damage the device.

13

• DO NOT use a pen or any sharp object to select the screen.
• DO NOT expose the device to dirty or dusty environments.
• DO NOT place the device on an uneven or unstable surface.
• DO NOT insert any foreign objects into the device.
• DO NOT expose the device to strong magnetic or electrical field.
• DO NOT use or store this equipment in a place where it will be exposed to high temperatures, such as near an open flame or heat-emitting equipment.
• DO NOT use it or store it where fluids such as water can splash onto it. Raindrops, water spray, juice, coffee, steam, or other types of liquids will also cause malfunctions.
• Using this device for long periods of time may cause the device to get warm. If you feel the device is too warm, avoid sustained contact with exposed skin otherwise this might cause discomfort, or eventually a burn.
• Refer to the rating label on the device and be sure that the power adapter complies with the rating. Only use accessories specified by the manufacturer.
• Disconnect the device from an electrical outlet and power off before cleaning the device.
• NEVER attempt to connect or disconnect the power adapter with wet hands.
• Clean the touch screen with a soft cloth. If needed, dampen the cloth slightly before cleaning.

14

Never use abrasives or cleaning solutions.
• DO NOT disassemble the device. Only a certified service technician should perform repair.
• Please check with your Local Authority or retailer for proper disposal of electronic products.
• For USB connection, users must use a USB 2.0 (or higher version) cable.
• Please make sure the temperature for adapter will not be higher than 50°C.
• Do not store your phone in temperatures higher than 50°C.
• The operating temperature for this device is from 0°C to 40°C.
• The adapter shall be installed near the equipment and shall be easily accessible.
• The temperature of the device might increase while the CPU is busy handling resource consuming activities such as high resolution video decoding. The SW protection mechanism will ensure stop charging whenever the temperature is over the predefined threshold and prepare for shut down if necessary. Please worry not.

Manufacturer's mobile handset booklet shall contain the following safety precautions:

• Use a wireless hands-free system (headphone, headset) with a low power Bluetooth emitter.

15

• Make sure the cell phone has a low SAR.
• Keep your calls short or send a text message (SMS) instead. This advice applies especially to children, adolescents and pregnant women.
• Use cell-phone when the signal quality is good.
• People having active medical implants should preferably keep the cell phone at least 15 cm away from the implant.

Safety Precautions for Battery Use

• Keep the battery dry and away from any liquid since this may cause a short circuit.
• Keep the battery away from metal objects since this may cause a short circuit.
• Do not use damaged or deformed batteries.
• If the battery emits a foul odor, discontinue use.
• Keep the battery away from babies and small children.
• If the battery leaks:
• Do not allow the leaking fluid to come in contact with your skin , eyes or clothing. If already in contact, rinse with clean water immediately and seek medical advice.
• Keep the battery away from fire since this may cause the battery to explode.
• Do not attempt to open or service the battery yourself.
• Do not dispose battery in fire or water.
• Recycle or dispose used batteries according to the

16

local regulations.

Road and Environmental Safety

• Turn off the phone in areas with a potentially explosive atmosphere or where flammable objects exist such as gas stations, fuel depots, and chemical plants among others. Sparks from these areas could cause explosion or fire and result in injury or even death.
• Do not use hand-held phones while driving a vehicle. Use hands free devices as an alternative.

Safety in Aircraft

Do not use the phone on board an aircraft. The phone's network signals may cause interference to the navigation system. As a safety measurement, it is against the law in most countries to use the phone on board an aircraft.

Copyright Information

Copyright . InFocus Corporation, 2015. All rights reserved.
•microSD™ is a trademark of SD Card Association. Bluetooth and the Bluetooth logo are trademarks owned by Bluetooth SIG, Inc. All products use in this device and trademarks mentioned herein are trademarks or registered trademarks of their respective owners.

SAR Information

17

THIS MOBILE DEVICE MEETS GUIDELINES FOR EXPOSURE TO RADIO WAVES. Your mobile device is a radio transmitter and receiver. It is designed not to exceed the limits for exposure to radio waves recommended by international guidelines. These guidelines were developed by the independent scientific organization ICNIRP and include safety margins designed to assure the protection of all persons, regardless of age and health.

The exposure guidelines for mobile devices employ a unit of measurement known as the Specific Absorption Rate or SAR. The SAR limit stated in the ICNIRP guidelines is 1.6 W/kg averaged over 1 grams of tissue. Tests for
SAR are conducted using standard operating positions with the device transmitting at its highest certified
power level in all tested frequency bands. The actual SAR level of an operating device can be below the maximum value because the device is designed to use only the power required to reach the network. That amount changes depending on a number of factors such as how close you are to a network base station. The highest SAR value under the ICNIRP guidelines for use of the device
at the ear is 0.204 W/kg and at the body is 0.428 W/kg (The measure distance of 1.5 cm). Use of device accessories and enhancements may result in different SAR values. SAR values may vary

18

depending on national reporting and testing requirements and the network band.

WEEE Notice

The WEEE logo on the product or on its box indicates that this product must not be disposed of or dumped with your other household waste. You are liable to dispose of all your electronic or electrical waste equipment by relocating over to the specified collection point for recycling of such hazardous waste. Isolated collection and proper recovery of your electronic and electrical waste equipment at the time of disposal will allow us to help conserve natural resources. Moreover, proper recycling of the electronic and electrical waste equipment will ensure safety of human health and environment. For more information about electronic and electrical waste equipment disposal, recovery, and collection points, please contact your local city center, household waste disposal service, shop from where you purchased the equipment, or manufacturer of the equipment.

RoHS Compliance

This product is in compliance with DIRECTIVE 2011/65/EU OF THE EUROPEAN PARLIAMENT AND OF THE COUNCIL of 8
June 2011,on the restriction of the use of certain hazardous substances in electrical and electronic equipment and its amendments

19

Warranty Statement

Limited warranty

InFocus provides "Product Warranty Statement", at the time of its original purchase, from the InFocus or its authorized distributor, describing the product warranty service.
Notes: InFocus does not provide global cross border warranty. This limited warranty (free of defects in materials and workmanship causing malfunction and defective) shall last for twelve (12) months for the device and six (6) months for the battery from the purchase date. Other than battery, all in-box accessories including data cable, earphone, charger if applied, will have six (6) months warranty. The customer should present the PROOF OF PURCHASE for claiming the warranty. Throughout the warranty period InFocus or its authorized agent will, at own discretion and subject to section Non-Warranty below repair or replace a defective product. All replaced defective parts or components will become the property of InFocus after returning the repaired/replaced product in good working condition. This repair on the same symptom, one (1) month repair warranty is provided.

Non-Warranty

No warranty may be asserted or claimed if (1) the product serial number, date code, IMEI, water indicator or the warranty seal has been removed,

20

erased, defaced or altered; or (2) the defect is found to be case by
(1) By engineering judgement, the product is mishandled/misused carelessly or accidentally. Unauthorized disassembling or repair, repair by use if unauthorized spare parts, or other actions beyond the reasonable control of InFocus.
(2) Improper shipping and packing.
(3) Forces of nature of willful misconduct.
(4) Rough handling, exposure to moisture, dampness or extreme thermal or environmental conditions or a rapid change in such conditions, corrosion, oxidation, unauthorized modifications or connections.
(5) Deterioration of the product due to normal wear and tear. Products installed or integrated with software or applications which are not made or authorized by InFocus. Be sure to back up data and remove any confidential, proprietary or personal information from the product when asking service. InFocus is not responsible for the damage to or loss of any programs, data, or removable storage media inside or sent with the products. As to Non warranty product, InFocus will check
if a repair is economical/available and provide a chargeable service to customer's consideration.

IN NO EVENT SHALL InFocus BE LIABLE UNDER THIS LIMITED WARRANTY FOR LOSS OF PROFIT, LOSS OF ANTICIPATED SAVINGS, LOSS OF DATA OR INDIRECT LOSS, LOSS OF THE

21

PRODUCT OR ANY ASSOCIATED EQUIPMENT, INCIDENTAL OR CONSEQUENTAL LOSSES OR DAMAGES
OF ANY NATURE WHATSOEVER TO THE FULLEST EXTENT THAT THOSE LOSSES OR DAMAGES CAN BE DISCLAIMED BY LAW.

Note:
1. 材質：80g特銅紙
2. 顏色：四色
3. 裝訂方式：彈簧對折
4.尺寸：230x390mm,
對摺成型後：115x65mm
5.單張 雙面印刷